

Need help?

Alphacool International GmbH
Marienberger Str. 1
D-38122 Braunschweig
Germany


Support: +49 (0) 531 28874 - 0
Fax: +49 (0) 531 28874 - 22
E-mail: info@alphacool.com
<https://www.alphacool.com>

We care!



alphacool

V. 1.000 // 12.2025

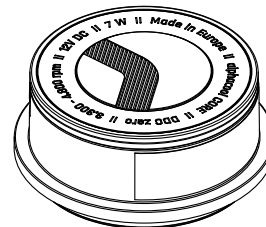

Alphacool
Core DDCzero PWM Pump



Safety instructions
Sicherheitshinweise
Avis de sécurité



Digital guide
Digitale Anleitung
Guide digital



EN


Accessories

DE


Zubehör

FR

Accessoires

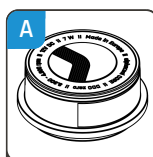

1x
Core DDCzero
Pump

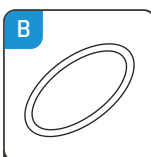

1x
O-Ring



1x
4-Pin PWM
Cable

EN

Install O-ring


DE

O-Ring installieren


FR

Installer le joint torique

1

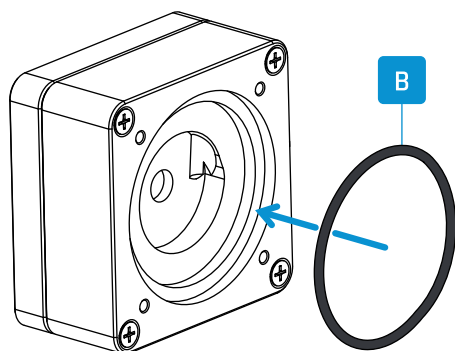

2

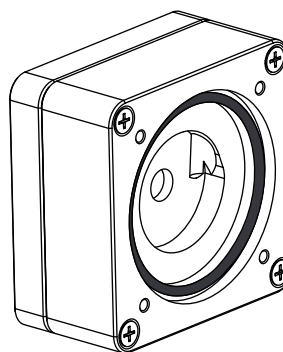

EN

Install pump in pump top

DE

Pumpe in Pumpentop installieren


FR

Installer la pompe dans la partie supérieure

(Example assembly)

(Beispielmontage)

(Exemple d'assemblage)

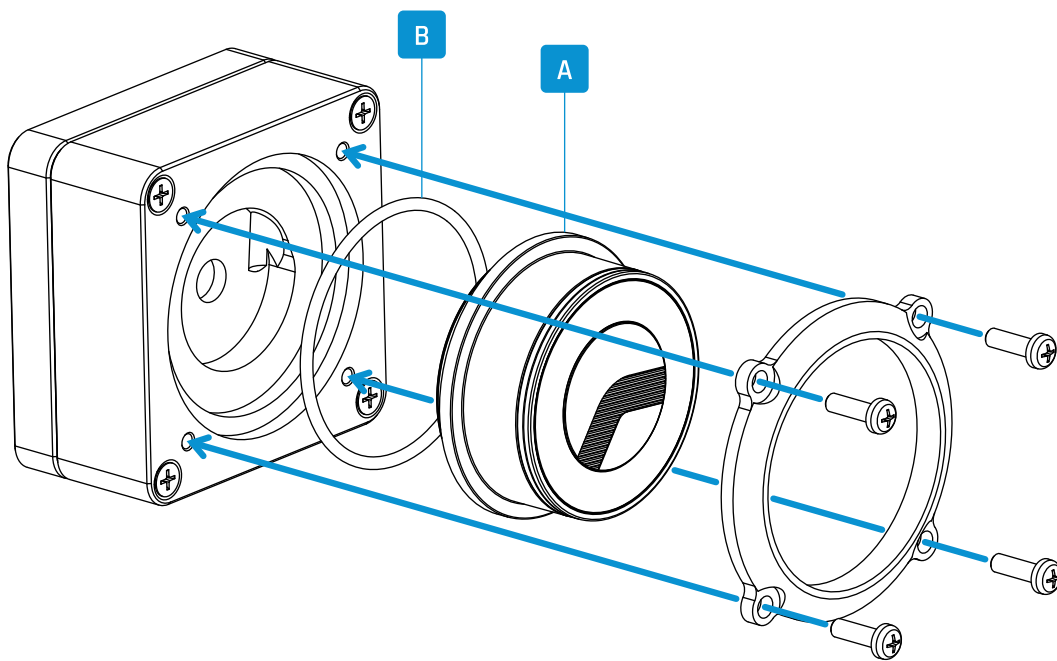

EN

Connect 4-pin PWM cable

DE

4-Pin PWM Kabel anschließen

FR

Connecter le câble PWM à 4 broches

